

---

Subject: axis increments on 2D plots

Posted by [paulc](#) on Thu, 23 Apr 2020 13:49:53 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Apologies upfront as I must have missed this in the documentation and forum discussions, but how does one change the increment values on the x- and/or y- axes in the 2D View to desired values instead of the default values ?

Thank you,  
Paul

---